

# Inmarsat LaunchPad version 5.04 for BGAN and FleetBroadband for Windows XP, Vista and Windows 7

Briefing note  
3<sup>rd</sup> September 2012

Inmarsat LaunchPad v5.04 for Windows XP, Vista and Windows 7 is released and available for download now. Go to **[www.inmarsat.com/support](http://www.inmarsat.com/support)**, click on **BGAN or FleetBroadband**, then click on **Inmarsat LaunchPad**.

## In this Release

- Support for JRC JUE251 and JUE501
- Support for Seatel FX150, 250 and 500

## Recommendations for installation

Inmarsat advises that all customers using Windows XP, Vista and Windows 7 install BGAN LaunchPad v5.04 to take advantage of the features of this custom-designed interface to your Inmarsat terminal.

## Land Portable Terminals Supported

- Thrane & Thrane EXPLORER 100
- Thrane & Thrane EXPLORER 110
- Thrane & Thrane EXPLORER 300
- Thrane & Thrane EXPLORER 500
- Thrane & Thrane EXPLORER 700
- Thrane & Thrane EXPLORER 700 WOW
- HUGHES 9201
- HUGHES 9202
- Harris FALCON @III RF-7800B-DU
- Wideye SABRE 1
- Wideye SAFARI

## Land Mobile Terminals Supported

- Thrane & Thrane Explorer 325
- Thrane & Thrane EXPLORER 527
- Thrane & Thrane EXPLORER 727
- HUGHES 9250
- HUGHES 9350
- HUGHES 9350 C11
- HUGHES 9450 C11
- Harris FALCON @III RF-7800B-VU
- Glocom GX-10
- Glocom GX-11

## FleetBroadband Terminals Supported

- Thrane & Thrane Sailor 150
- Thrane & Thrane Sailor 250
- Thrane & Thrane Sailor 500
- Furuno Felcom 250
- Furuno Felcom 500
- JRC JUE -250
- JRC JUE-500
- JRC JUE-251
- JRC JUE-501
- AddValue Skipper 150
- Satlink FB250
- Seatel FX150,250 and 500

## Requirements Installing Inmarsat LaunchPad v5.04

You must have a PC running minimum, Windows XP Service Pack 3, Windows Vista Service Pack 1 or Windows 7. Before you can install Inmarsat LaunchPad v5.04 you must also have installed the latest version of JRE on your PC. JRE is available for download from [www.inmarsat.com/support](http://www.inmarsat.com/support) or from [java.sun.com](http://java.sun.com). Inmarsat LaunchPad will prompt you for this during the install process if JRE is not detected

## Installing Inmarsat LaunchPad v5.04

- a. Download the installer from **[www.inmarsat.com/support](http://www.inmarsat.com/support)**, click on **BGAN or FleetBroadband**, then click on **Inmarsat LaunchPad**. Follow the on-screen instructions to download the installer to your desktop.
- b. Double-click on the Inmarsat LaunchPad installer.
- c. Follow the on-screen instructions.
- d. The Inmarsat LaunchPad icon is installed on your desktop. Double-click on the icon to open Inmarsat LaunchPad.

## Also In this Release

- Minor bug fixes

## Further documentation

The Inmarsat LaunchPad User Manual for either BGAN or FleetBroadband is available from.

**[www.inmarsat.com/support](http://www.inmarsat.com/support)**. Click on **User guides**

**[inmarsat.com/bgan](http://inmarsat.com/bgan)**

Whilst the above information has been prepared by Inmarsat in good faith, and all reasonable efforts have been made to ensure its accuracy, Inmarsat makes no warranty or representation as to the accuracy, completeness or fitness for purpose or use of the information. Inmarsat shall not be liable for any loss or damage of any kind, including indirect or consequential loss, arising from use of the information and all warranties and conditions, whether express or implied by statute, common law or otherwise, are hereby excluded to the extent permitted by English law. INMARSAT is a trademark of the International Mobile Satellite Organisation. Inmarsat LOGO is a trademark of Inmarsat (IP) Company Limited. Both trademarks are licensed to Inmarsat Global Limited. © Inmarsat Global Limited 2008. All rights reserved.